

Westbuild PRO™ Flexible Additive Fortifier & Primer with Easy Screed - Dilution Guide

Step 1

Mix gauging liquid.




Step 2

Use gauging liquid at a rate of 1-1.2L per 20kg Easy Screed.



Step 3

Apply Easy Screed, ensuring a bonding agent is used.

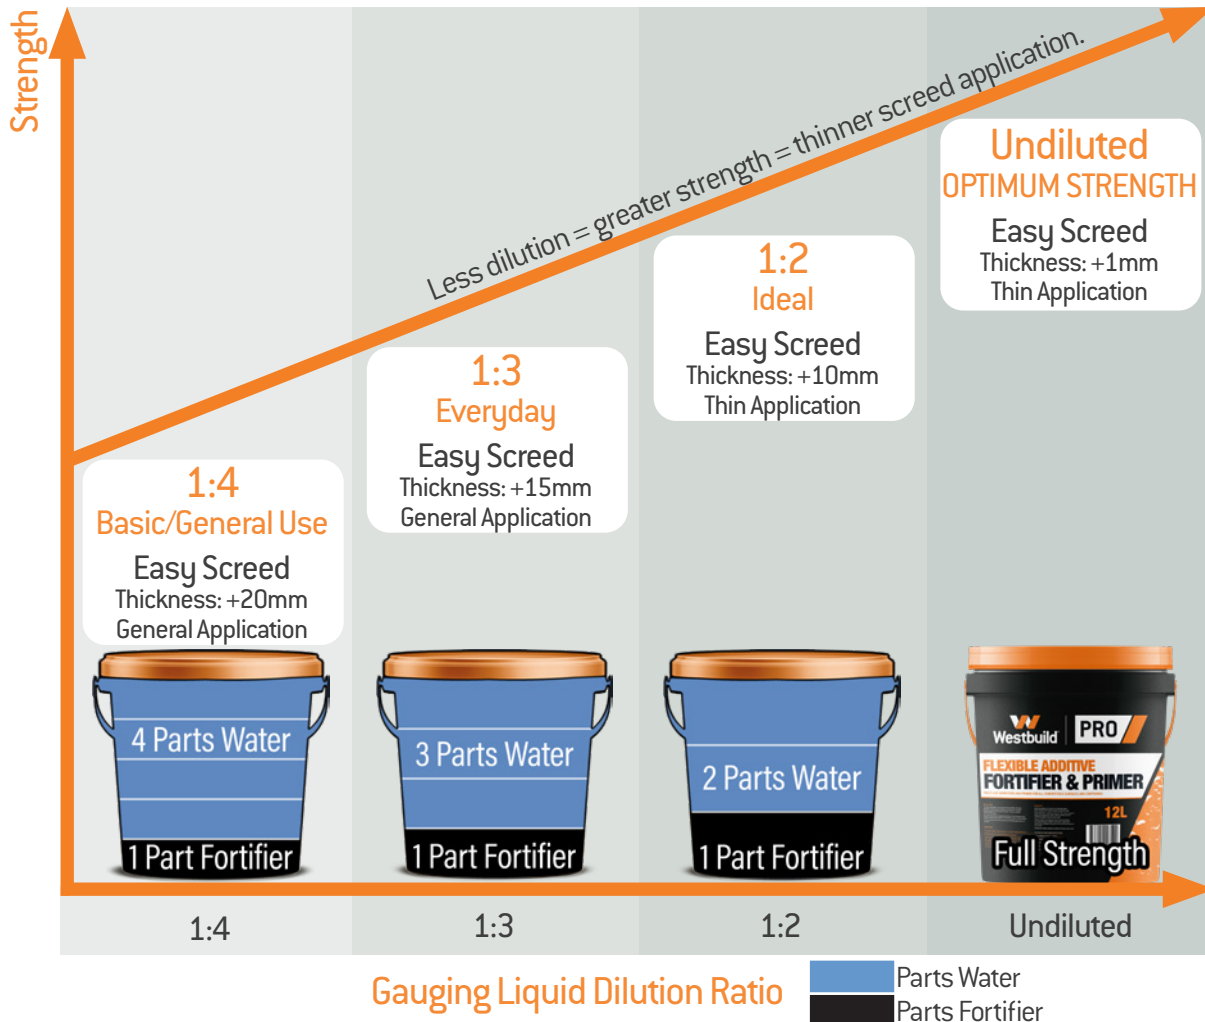

Handy Tip

Ensure a bonding agent is used to adhere Easy Screed to the substrate.

Westbuild recommends a ratio of 3:1 (3 parts fortifier to 1 part GP Cement).

This should then be applied to the substrate, and whilst wet the Easy Screed is applied over the top.



Westbuild PRO Flexible Additive Fortifier & Primer

Use with any cement-based product, including: tile adhesives, render, mortar, grout, etc. to improve adhesive, cohesive, flexural and compressive strengths.